


WIRELESS MICROPHONE AUDIO MIXER



UHF 5.0 48V

USER MANUAL

PRODUCT DESCRIPTION---MIXER

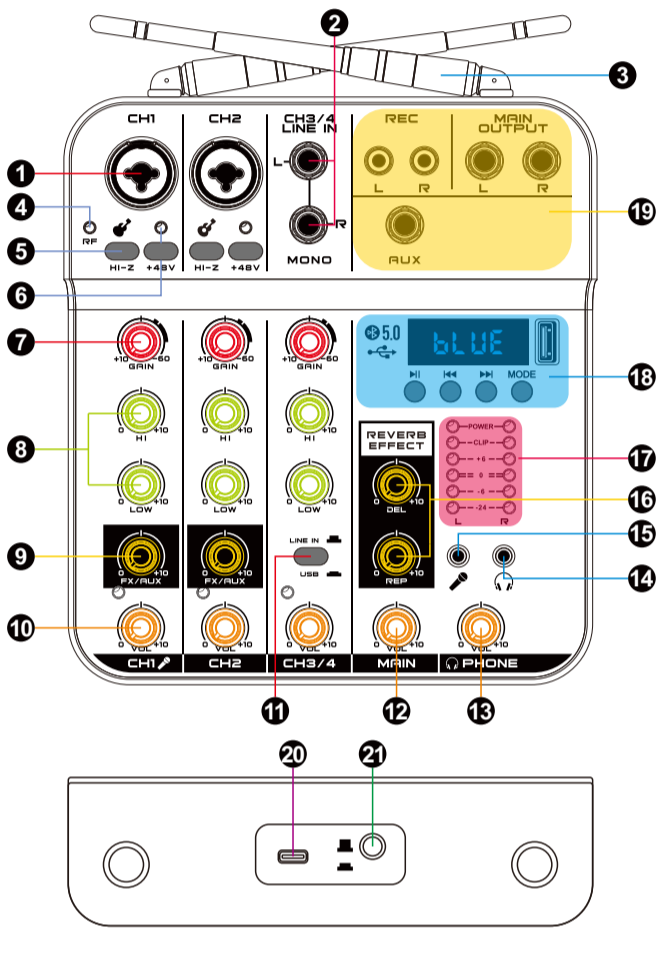

WIRELESS MICROPHONE SYSTEM

Transmitter Technical Specifications
 Frequency Range: 510.50~569.50MHz
 Number of Channels: 10 for each A and B channel (ID code changes randomly during each pairing, within the frequency range set by the manufacturer)
 Oscillation Mode: DSP chip frequency lock
 Frequency Stability: ±10ppm
 RF Power: 10dBm
 Audio Frequency Response: 40~18000Hz
 Distortion: ≤0.5%
 Battery Specifications: AA battery*2
 Continuous Use Time: 4 hours (depending on battery type and capacity)

Receiver Technical Specifications
 Frequency Range: 510.50~569.50MHz
 Number of Channels: 10 for each A and B channel (conservative value) Each time pairing, ID code changes randomly, within the frequency range set by the manufacturer.
 Oscillation mode: DSP chip frequency lock
 Frequency stability: ±10ppm
 Sensitivity: -95~-71dBm
 Audio frequency response: 40~18000Hz
 Distortion: ≤0.5%
 Signal-to-noise ratio: ≥90dB
 Audio output: 350mv (maximum)

TECHNICAL SPECIFICATIONS OF MIXER

Microphone input: electronically balanced, discrete input configuration
 Frequency response: 10Hz~20KHz
 Gain range: +14dB~60dB
 Signal-to-noise ratio: 120dB
 Line input: electronically balanced
 Gain range: +10dB~+60dB
 Signal-to-noise ratio line: -96dB / microphone 104dB
 HI: 10KHz +/- 15dB main
 Low: 50Hz +/- 15dB
 Output: +28dB balanced / +22dB unbalanced

PRODUCT DESCRIPTION---MIXER

- | | |
|-------------------------|--------------------------|
| 1. XLR/6.35mm输入接口 | 11.线路/USB输入模式切换 |
| 2.输入接口 (6.35mm L/R) | 12.主音量 |
| 3.无线话筒信号天线 | 13.耳机音量 |
| 4.无线话筒信号指示灯 | 14.耳机接口 (3.5mm) |
| 5.阻抗切换 | 15.话筒接口 (3.5mm)由CH1控制 |
| 6.幻象电源48V开关 (当XLR连接时可用) | 16.延时和混响的效果控制 |
| 7.增益调节 | 17.电源灯/音频峰值显示 |
| 8.高音和低音 | 18.MP3模块功能控制: U盘或者蓝牙播放控制 |
| 9.混响效果/FX音量 | 19.多种输出接口 (RCA/6.35mm) |
| 10.频道音量控制 | 20.Type C接口 (供电和数据传输) |
| | 21.PC和USB模式切换 |

- | | |
|---|---|
| 1. XLR/6.35mm input interface | 11. Line/USB input mode switch |
| 2. Input interface (6.35mm L/R) | 12. Master volume |
| 3. Wireless microphone signal antenna | 13. Headphone volume |
| 4. Wireless microphone signal indicator | 14. Headphone jack (3.5mm) |
| 5. Impedance switch | 15. Microphone jack (3.5mm) controlled by CH1 |
| 6. Phantom power 48V switch (available when XLR is connected) | 16. Delay and reverb effect control |
| 7. Gain adjustment | 17. Power light/audio peak display |
| 8. Treble and bass | 18. MP3 module function control: U disk or Bluetooth playback control |
| 9. Reverb effect/FX volume | 19. Multiple output interfaces (RCA/6.35mm) |
| 10. Channel volume control | 20. Type C interface (power supply and data transmission) |
| | 21. PC and USB mode switch |


HOW TO USE MP3 MODE AND USB MODULE



注意事项 NOTES

- 当混音器连接到PC时, 需要把背部按钮选择PC才能成功连接。
- 该混音器蓝牙名称为“BT_5.0”。
- 录音模式需要连接U盘后才能选择, 长按 **▶** 键进行录音, 再次按下 **▶** 键停止录音。
- 某些U盘因为格式问题无法播放或者无法进行录音, 请更换U盘或者格式化后再次尝试。
- When the mixer is connected to a PC, you need to press the back button to select PC to successfully connect
- The Bluetooth name of the mixer is "BT_5.0"
- The recording mode can only be selected after connecting the USB flash drive. Long press the **▶** key to start recording, and press the **▶** key again to stop recording.
- Some USB flash drives cannot be played or recorded due to formatting issues. Please replace the USB flash drive or format it and try again.

PRODUCT DESCRIPTION---MICROPHONE

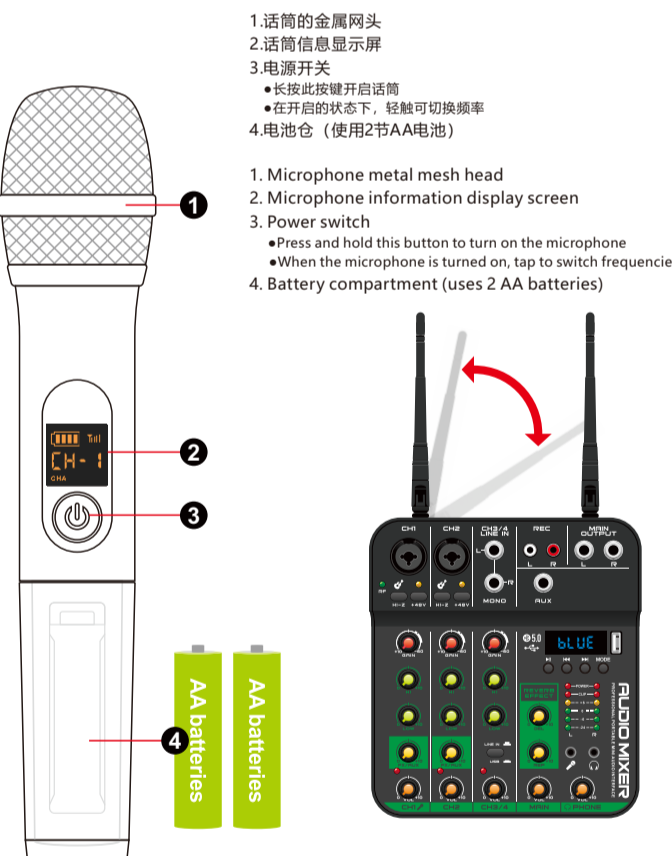

- 话筒的金属网头
- 话筒信息显示屏
- 电源开关
 - 长按此按键开启话筒
 - 在开启的状态下, 轻触可切换频率
- 电池仓 (使用2节AA电池)

- Microphone metal mesh head
- Microphone information display screen
- Power switch
 - Press and hold this button to turn on the microphone
 - When the microphone is turned on, tap to switch frequencies
- Battery compartment (uses 2 AA batteries)

当开启无线话筒后, 为了确保信号正常请把天线竖起来。
 When the wireless microphone is turned on, please put the antenna upright to ensure normal signal.

DEVICE CONNECTION GUIDE



⚠ TROUBLESHOOTING AND PRECAUTIONS ⚠

●The microphone sound is very low or no sound?
 Check the volume of the current channel. If you are using a wireless microphone, please check if the microphone battery is low. If you are using a condenser microphone, you need to turn on the 48V power supply. If the volume is too low, you can increase the gain but try not to exceed 3/4.

麦克风声音很小或者没有声音?
 检查当前频道的音量。如果使用无线麦克风, 请检查麦克风电池是否电量不足。如果使用电容麦克风, 需要打开48V电源。如果音量太小, 可以增加增益但尽量不要超过3/4。

●Can't be recognized after connecting to the computer?
 Please make sure that the button on the back of the mixer is correctly selected as "PC" and connect it to the computer using a USB cable. Sometimes the power supply of the computer's USB interface is unstable. You can switch to another USB interface or change the computer for testing.



连接电脑后无法识别?
 请确保调音台背面的按钮正确选择为“PC”, 并使用USB线连接电脑。有时电脑USB接口供电不稳定, 可以换个USB接口或者换台电脑测试。

●No sound after Bluetooth connection?
 Please check whether the Bluetooth search on the phone is turned on and connected correctly (name "BT_5.0"), and check whether the mixer mode is selected as USB mode, then turn on the volume of 3/4 channels and the Main volume to play music using Bluetooth.

连接电脑后无法识别?
 请检查手机蓝牙搜索是否打开并正确连接(名称“BT_5.0”), 混音模式是否选择为蓝牙模式, 然后打开3/4声道音量和主音量, 即可使用蓝牙播放音乐。

如果遇到更多问题无法解决, 请联系客服人员咨询, 指引操作以解决问题, 感谢您的理解
 If you encounter more problems that cannot be solved, please contact customer service for consultation and guidance to solve the problem. Thank you for your understanding.

2CH
 WIRELESS MICROPHONE

4CH
 MIXING CONSOLE SOUND CARD