



# **PROFESSIONAL UHF IN EAR MONITORING SYSTEM**





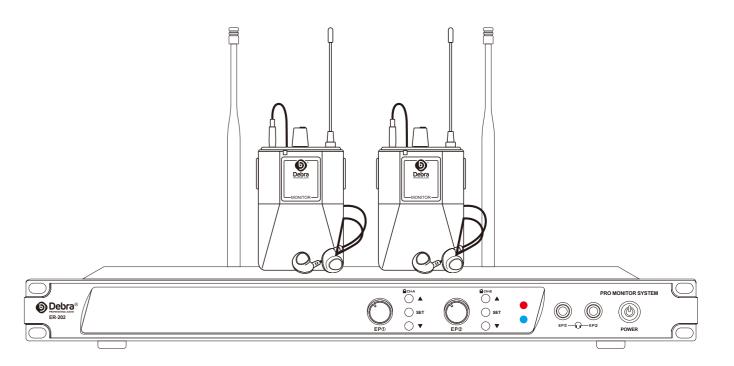





I'm glad that you have purchased our wireless monitoring system. It will give you an easy-to-use professional monitoring experience. Please read the product description carefully before using it. If you have any questions you don't understand, please contact OUr 🚹 @DebraAudio

#### **ER-202 Monitor system parameters**

Modulation Method:  $\pi/4$ -DQPSK Frequency Range:610-786MHz,2x100/4x50CHs Sampling Ratio:48KHz Transmission Rate:204.8Kbps Dynamic Range: > 90dB Total Harmonic Distortion: < 0.1% Delay Time of Audio Transmission: < 3ms S/N Ratio: > 96dB Frequency Response:30~20Khz RX Sensitivity: < -94dBm Unique ID Address:YES


### Some tips to improve the performance of the system


•The transmitter and antenna should kept in the relative position of accessibility of the straight line.

•Don't put the receiver close to the radio wave emission source, with magnetic objects or most digital devices(such as the CD player, computer, speaker, wifi etc).


•Try to place the receiver in height of 1.5 meters from the ground and the position of a distance of 1 meter away from the wall.


## ER-202 monitor system parameters @ **TRANSMITTER FUNCTION**

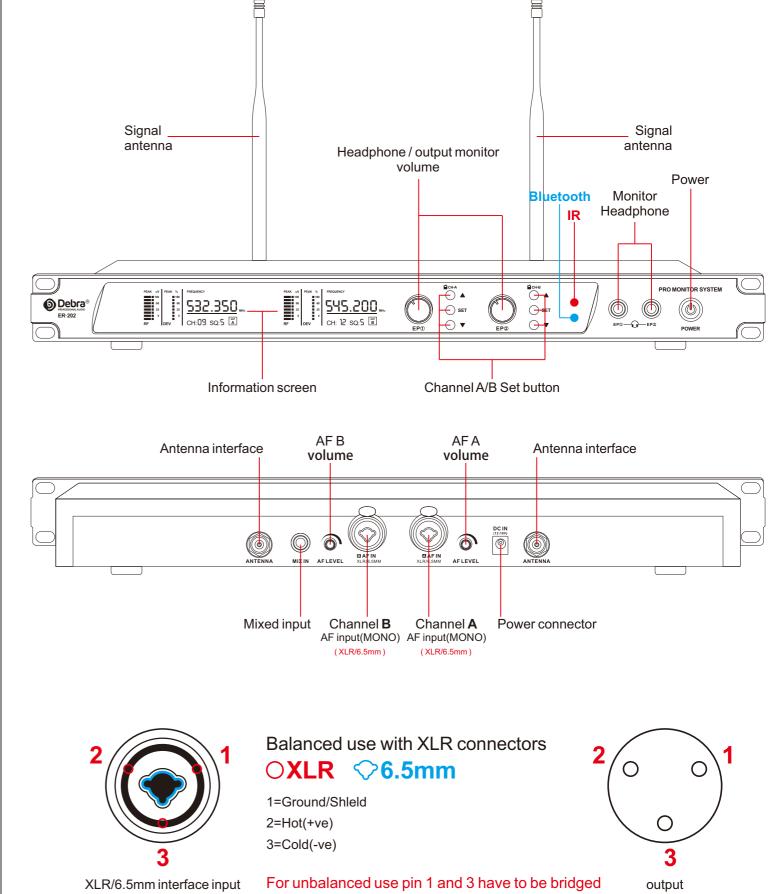

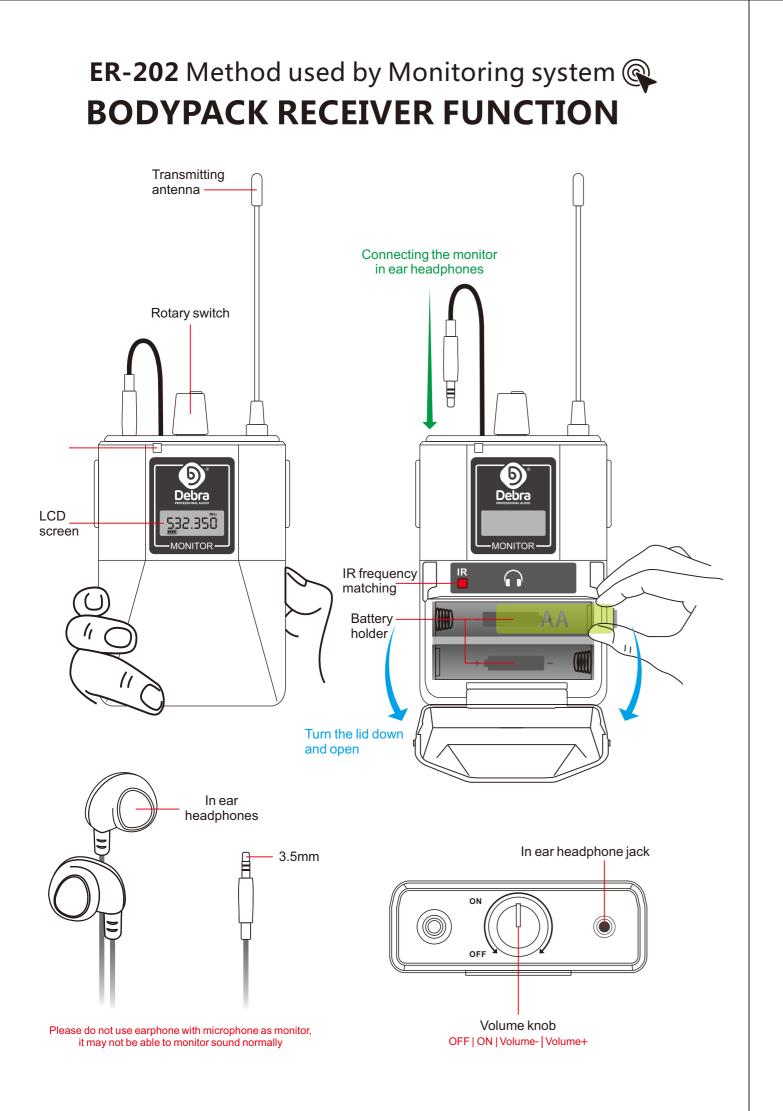

## ER-202 Method used by Monitoring system @ **BODYPACK RECEIVER FUNCTION**

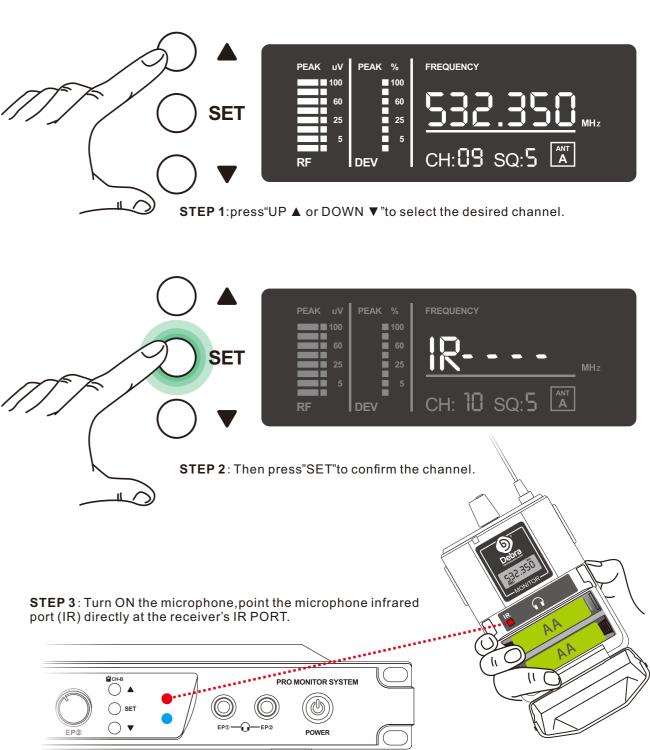

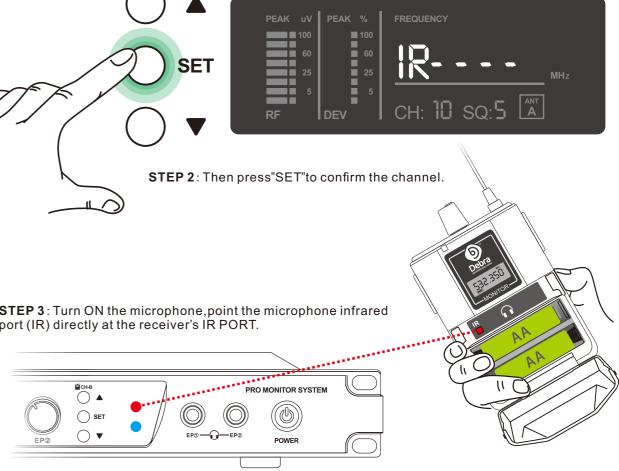


NOTE:


When adjusting the frequency of one receiver, make sure that the other receivers are far away from the transmitter. Before leaving the factory, each unit has been fully tested and appraised by the manufacturer for 3 times. However, depending on the environment, radio signals from other wireless devices may interfere with this device. You can try to change the frequency channel to avoid interference.

How to select frequencies/channels for the receiver? Manual frequency/Channel select

## ER-202 Method used by Monitoring system BODYPACK RECEIVER FUNCTION

## HOW TO LOCK/UNLOCK THE DISPLAY?

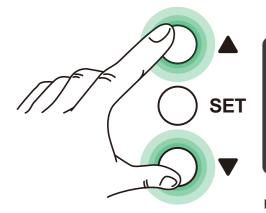

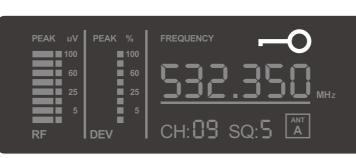

Press and hold"UP ▲"and"DOWN ▼"at the same time to lock/unlock the setting.



# **TROUBLESHOOT/STATUS**

▲ Please remove the fault according to the reference suggestions first. Please do not disassemble the equipment for maintenance at will. If you disassemble the equipment without authorization, we will no longer provide maintenance and after-sales service. Thank you for your understanding.

Troubles	Status	
No sound or weak voice	The receiver LCD display off	●T ●T + jc
	Receiver LCD display off	●C a ●C c
	The display of the transmitter shows that there is no RF signal.Receiver signal indicator does not light up	●V ●C tr ●M ●C a
Distortion or excess of burst noise	The display screen of the receiver shows that there is RF signal	<ul> <li>L</li> <li>C</li> <li>ci m</li> <li>C</li> <li>a</li> <li>If</li> <li>si e</li> </ul>

#### Solutions

Furn on the receiver power.

Turn on the receiver cover,confirm that the +/- marks on the battery match with the head oint of the treceiver.

Install new batteries to replace old batteries.

Check whether the head of the power adapter is connected to the power outlet.

Confirm whether the power adapter is connected to the receiver.

Please check whether the power socket is working properly.

Vertically the receiver antenna.

Check if there are obstacles between the ransmitter and the receiver.

Move the transmitter closer to the receiver.

Check whether the receiver and transmitter are in the same frequency.

Lower the maximum volume.

Check for interference and eliminate nearby sources of interference (such as CD players, computers, digital devices, earplug monitoring systems, etc.)

Check whether the battery is nearly dead, and replace it with a new one.

f multiple systems are used together in the same time, the frequency interval between each system can be increased.